

Elcometer 331

Half-Cell Meter

Model HM

Operating Instructions



CE The Elcometer 331 Half-Cell Meter has been tested in accordance with EU regulations governing Electro-magnetic compliance and it meets the required directives.

Note: Readings may be affected if the unit is operated within a radio frequency electromagnetic strength of greater than 3 V/m.

© Copyright Elcometer Limited. 2008-2012.

elcometer®, CoverMaster® and **protovale** are registered trademarks of Elcometer Limited.

Material Safety Data Sheets for the Elcometer 331 Half Cell Probes can be downloaded via our website:

Elcometer 331 Half Cell Probe Copper-Copper Sulphate (Cu-CuSO₄)

www.elcometer.com/images/MSDS/elcometer_331_half_cell_copper.pdf

Elcometer 331 Half Cell Probe Silver-Silver Chloride (Ag-AgCl)

www.elcometer.com/images/MSDS/elcometer_331_half_cell_silver.pdf

All other trademarks acknowledged. All rights reserved. No part of this Document may be reproduced, transmitted, transcribed, stored (in a retrieval system or otherwise) or translated into any language, in any form or by any means (electronic, mechanical, magnetic, optical, manual or otherwise) without the prior written permission of Elcometer Limited.

A copy of this Instruction Manual is available for download on our Website via www.elcometer.com

CONTENTS

Section	Page
1 About your Half-Cell Meter	2
2 Quick-start	6
3 Getting started	6
4 The menus	16
5 Measuring half-cell potential	24
6 Setting limits	27
7 Statistics	29
8 Batching/Data logging	33
9 A typical survey (using grid batch memory)	47
10 Plotting batches	49
11 Transferring readings to a computer	53
12 Half-cell probes	56
13 Personalised welcome screen	58
14 Error messages	59
15 Storage	59
16 Maintenance	60
17 Technical data	60
18 Accessories	61
19 Related equipment	62
20 Index.....	63

Thank you for your purchase of this Elcometer 331 Half-Cell Meter. Welcome to Elcometer.

Elcometer are world leaders in the design, manufacture and supply of inspection equipment for concrete and coatings. Our concrete inspection products include a comprehensive range of concrete, and civil engineering inspection equipment. Our coatings products cover all aspects of coating inspection, from development through application to post application inspection.

The Elcometer 331 Half-Cell Meter is a world beating product. With the purchase of this Half-Cell Meter you now have access to the worldwide service and support network of Elcometer. For more information visit our website at www.elcometer.com

1 ABOUT YOUR HALF-CELL METER

The Elcometer 331 Half-Cell Meter is a portable Half-Cell Meter for fast and accurate assessment of the potential for corrosion of concrete reinforcement bars.

Your Half-Cell Meter measures half-cell potential - an electrochemical technique commonly used to assess the potential for corrosion in reinforced concrete structures. The instrument acts as a voltmeter which measures the potential difference between the steel reinforcement in the concrete structure and a reference electrode (the half-cell) placed on the surface of the concrete.

The Half-Cell Meter is available in two versions:

- Model H (entry level)
- Model HM (with data logging)

This manual describes the operation of the **Elcometer 331 Half-Cell Meter Model HM**.

Both versions of the instrument feature an easy-to-use menu-driven graphical interface which guides the user during setup and measurement. A range of half-cell probes is available to suit your requirements.

This instrument is packed in cardboard and plastic packaging. Please ensure that this packaging is disposed of in an environmentally sensitive manner. Consult your Local Environmental Authority for further guidance.

To maximise the benefits of your new Elcometer 331 Half-Cell Meter please take some time to read these Operating Instructions. Do not hesitate to contact Elcometer or your Elcometer supplier if you have any questions.

1.1 FEATURES

Feature	Elcometer 331 Model		Page
	H	HM	
Menu-driven backlit graphical user interface	✓	✓	12
Weather proof to IP65	✓	✓	-
Multiple languages	✓	✓	14
Memory - multiple linear and grid batches, up to 240 000 readings	×	✓	33
Text fields for input of user data in each batch	×	✓	35
Date and time stamping	×	✓	35
Statistical analysis of readings and batches	×	✓	29
Alarm if reading is outside limits	×	✓	27
Transfer readings and statistics to a computer	×	✓	53
CoverMaster® software for batch setup, data transfer and reporting	×	✓	54
Plot mode	×	✓	49

1.2 STANDARDS

The Elcometer 331 Half-Cell Meter can be used in accordance with the following National and International Standards; ASTM C876, DGZfP:B3, TR60, UNI 10174.

1.3 WHAT THIS BOX CONTAINS

- Elcometer 331 Model HM Half-Cell Meter
- Rechargeable battery pack and battery charger (UK, EUR & US)
- 25 m extension cable on spool
- 1.7 m red rebar cable with connecting clip
- 1.7 m black half-cell connecting cable
- Earphone
- Shoulder strap
- CD containing CoverMaster[®] software
- Data transfer cable
- Plastic carrying case
- Operating instructions

Note: *Half-Cell probes are not supplied with the main instrument and have to be ordered separately - see "Accessories" on page 61.*

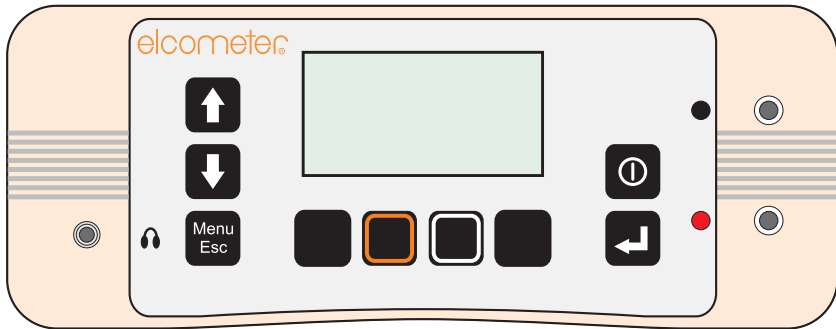


Figure 1. Elcometer 331 Half-Cell Meter

1.4 CONVENTIONS IN THESE INSTRUCTIONS

A simple menu structure helps you get the most from your Half-Cell Meter - see “The menus” on page 16. There are many references to this menu structure in these instructions.

As an example, the LANGUAGE option which is in SETUP from the MAIN MENU would be shown in these instructions as:

 MENU / SETUP / LANGUAGE

2 QUICK-START

Note: Before switching the Half-Cell Meter on for the first time read “Selecting a language” on page 14.

To configure the Half-Cell Meter quickly and start taking readings:

1. Charge the batteries see page 7
2. Fit half-cell probe and cables see page 10
3. Switch on see page 12
4. Select language see page 14
5. Take readings of half-cell potential see page 24
6. To use memory see page 33

For an overview of your Half-Cell Meter menus and functions, see pages 16 to 23.

3 GETTING STARTED

This section of the instructions is intended for first-time users of the Half-Cell Meter. It contains essential information about batteries, assembling the Half-Cell Meter, the controls and the display. At the end of this section you will be ready to take readings.

3.1 THE POWER SUPPLY

Your Half-Cell Meter is powered by a rechargeable Lithium-Ion^a battery pack which can be charged inside or outside the Half-Cell Meter.

-
- a. The Half-Cell Meter is **not** designed to operate using dry cell batteries.


One battery pack is supplied with the Half-Cell Meter. To increase productivity on site, Elcometer recommends that you purchase a spare battery pack which can be charged while you are using your Half-Cell Meter. To order an additional battery pack (see “Accessories” on page 61), contact Elcometer or your local Elcometer supplier.

CHARGING THE BATTERIES

The rechargeable battery must be fully charged before using the Half-Cell Meter for the first time. Use only the charger supplied with your Half-Cell Meter to charge the battery. Use of any other type of charger is a potential hazard, may damage your Half-Cell Meter and will invalidate the warranty. Do not attempt to charge any other batteries with the supplied charger.

Always charge the battery indoors. To prevent overheating, ensure that the charger is not covered.

1. Unscrew the retaining screw (1) and open the interface access cover (2) on the rear of the Half-Cell Meter.

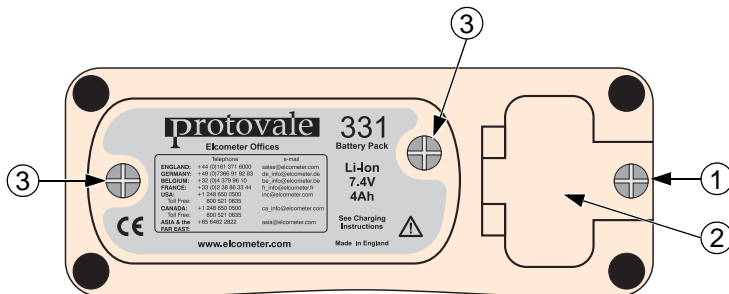

elcometer

2. Connect the lead from the charger into the socket marked 'Charger Input' behind the interface access cover.

The Half-Cell Meter will automatically switch off when the lead from the charger is connected.



(battery in the Half-Cell Meter)



(battery removed)

3. Plug the charger supplied into the mains supply. The LED indicator on the charger will glow orange.
4. Leave the gauge charging for at least 4 hours. The LED indicator changes colour from orange to green when charging is complete.
5. When charging is complete, disconnect the charger from the mains supply before removing the lead from the Half-Cell Meter.

To remove the battery pack for charging outside the Half-Cell Meter, unscrew the two battery pack retaining screws (3) at the rear of the Half-Cell Meter and slide out the battery pack. To charge the battery once it has been removed, connect the lead from the charger into the socket on the battery pack.






Warning: Do not allow metallic objects to come into contact with the battery terminals; this may cause a short circuit and result in permanent damage to the battery.



Warning: Do not attempt to connect the supply side of the battery charger to generators or any other medium to high power source other than the single phase 50 Hz AC mains outlet supplied from an approved and safe mains switchboard. Connection to other supply sources such as generators or inverters may have the potential to damage the charger, the battery and/or the gauge, invalidating warranty.

BATTERY CONDITION INDICATOR

The state of charge of the battery is shown by a symbol on the display:


 = full charge,  = low charge,  (flashing + beep every 10 seconds) = charging required

When the battery is completely exhausted the instrument will emit 5 loud beeps and then switch off.

elcometer®

3.2 FITTING HALF-CELL PROBES

Connect the probe and cables as shown.

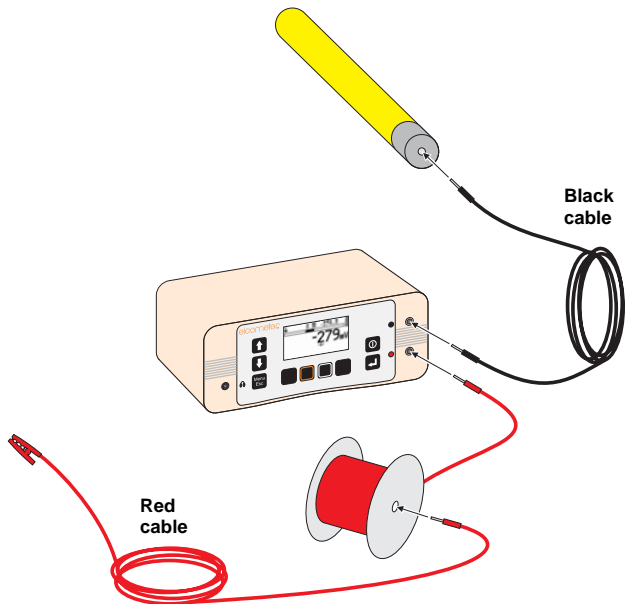

3.3 THE CONTROLS

All functions of the Half-Cell Meter can be controlled using the keypad. There are two types of keys on the keypad; fixed function keys and 'soft' keys (Figure 2).

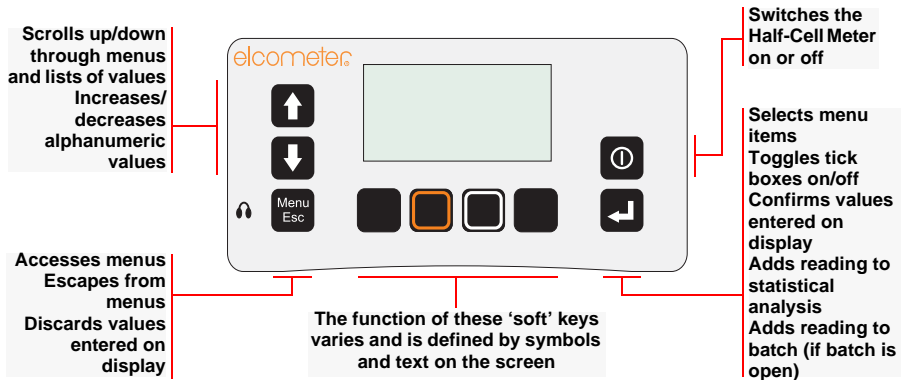


Figure 2. Half-Cell Meter keypad

3.4 SWITCHING THE HALF-CELL METER ON AND OFF

To switch the Half-Cell Meter on, press [**ⓘ**].

To switch the Half-Cell Meter off, press and hold [**ⓘ**] for two seconds.

The Half-Cell Meter includes an automatic switch off feature which will help to extend the battery life (time between charges). The automatic switch off time can be set to OFF, 5, 6, 7, 8, 9 or 10 minutes.



MENU / SETUP / AUTO SWITCH OFF

A countdown timer is displayed on the screen 60 seconds before the Half-Cell Meter switches off automatically. The timer counts down from 60 to 0 to warn you that the Half-Cell Meter is about to switch off. Press any key while the countdown timer is displayed to cancel automatic switch off.

3.5 THE DISPLAY

Take some time to familiarise yourself with the information shown on the display of your Half-Cell Meter. The display shows:

- Welcome information
- Measurement information
- Menus to configure the Half-Cell Meter and control functions
- Help and miscellaneous information


When the Half-Cell Meter is switched on an opening (welcome) information screen^b may be displayed briefly before the main reading screen appears.

The information shown depends upon whether you are taking measurements, reviewing readings or setting up the Half-Cell Meter.

The main screen displayed (while you are taking measurements) is the Reading Screen.

READING SCREEN

1. Half-cell potential - bar graph (zero at centre)
2. Half-cell potential - numerical

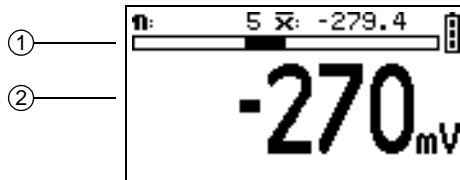

SYMBOLS


A wide range of symbols is used on the display. The meaning of all these symbols is stored in the Half-Cell Meter.

 MENU / ABOUT / HELP

LCD CONTRAST


Adjust the contrast of the display to suit lighting conditions.

 MENU / SETUP / LCD CONTRAST

-
- b. The opening (welcome) screen can be disabled.  MENU / SETUP / OPENING SCREEN.
Customised welcome screens can be created on a PC and downloaded into the gauge - see "Personalised welcome screen" on page 58.

BACKLIGHT

The display includes a backlight which illuminates the display for 10 seconds after any key is pressed and during measurements. Switch the backlight on or off as required. Switching the backlight off will increase battery life.

 MENU / BACKLIGHT

TIME AND DATE

The time and date can be displayed on the top line of the reading screen.

 MENU / SETUP / DISPLAY / SHOW TIME

3.6 SELECTING A LANGUAGE

Your Half-Cell Meter has a number of built-in languages. When the Half-Cell Meter is switched on for the first time after dispatch from the Elcometer factory the display will show the language selection screen (Figure 3).

AT FIRST SWITCH ON

1. Press [\uparrow] or [\downarrow] to locate language required.
2. Press [\rightarrow] to activate the selected language.

The Half-Cell Meter operates in the new language until changed.

AT ANY TIME

1. Switch the Half-Cell Meter off.
2. Press and hold left hand softkey.
3. Press [O] to switch on Half-Cell Meter.

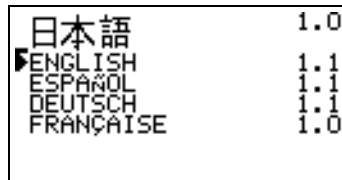


Figure 3. Language selection screen

The display will show the language selection screen with the current language highlighted by the cursor.

4. Release left hand softkey.
5. Press [↑] or [↓] to locate language required.
6. Press [↵] to activate the selected language.

Alternatively, select a language at any time.

 MENU / SETUP / LANGUAGE


3.7 COMPUTER INTERFACE

Your Half-Cell Meter is fitted with an RS232 interface. The interface is located under the interface access cover at the rear of the Half-Cell Meter - see page 7.

This 5-pin RS232 interface is used with the data transfer cable to connect the Half-Cell Meter to the RS232 port^c of a computer. When the Half-Cell Meter is connected to a computer you can:

- Download personalised screens to the Half-Cell Meter (see “Personalised welcome screen” on page 58).
- Transfer measurement data to a PC or printer (see “Transferring readings to a computer” on page 53).

3.8 USING THE EARPHONE

To use the earphone, plug the connector into the 3.5 mm socket marked  on the front of the Half-Cell Meter. Replacement earphones are available as an optional accessory - see “Accessories” on page 61.


-
- c. An RS232 to USB transfer cable is available which allows you to connect your Half-Cell Meter to a USB port on your computer. For ordering information, see “Accessories” on page 61.

4 THE MENUS

The menus of your instrument are shown on the next page and a description of each menu item is given in the following paragraphs.

To access the menus press the MENU softkey.

To return to the reading screen quickly, press and hold the MENU softkey.

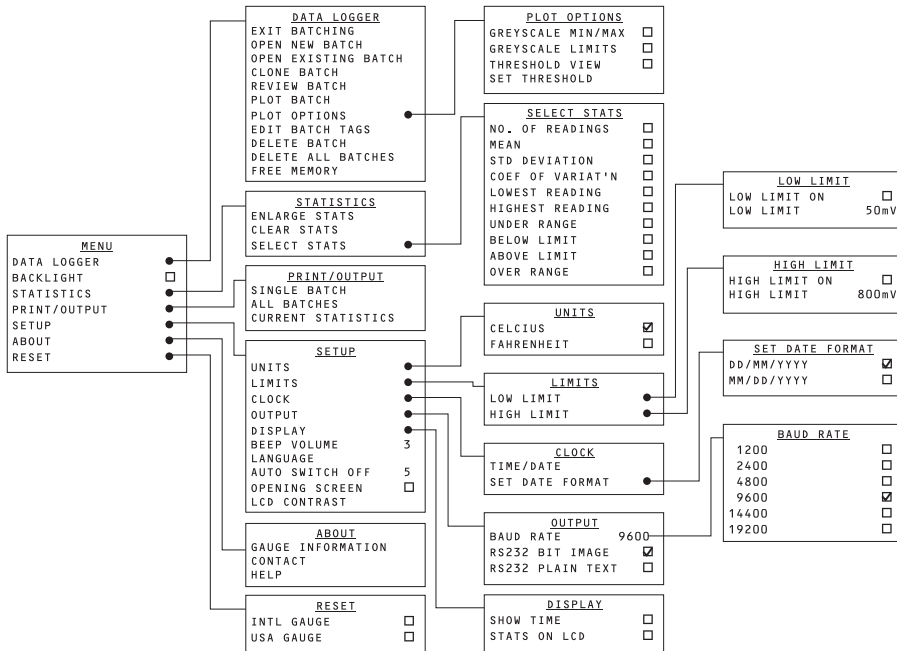

4.1 MENU

DATA LOGGER	Opens Data logger menu	See 4.2 DATA LOGGER
BACKLIGHT	Toggles the display backlight on or off	
STATISTICS	Opens Statistics menu	See 4.3 STATISTICS
PRINT/OUTPUT	Opens Print/output menu	See 4.4 PRINT/OUTPUT
SETUP	Opens Setup menu.	See 4.5 SETUP
ABOUT	Opens About menu.	See 4.6 ABOUT
RESET	Opens Reset menu.	See 4.7 RESET

Note: *When Backlight is on, the display is lit for 30 seconds after any key press and during measurement.*

4.2 DATA LOGGER

EXIT BATCHING	Switches off data logger
OPEN NEW BATCH . . .	Opens a new memory batch and starts data logger
OPEN EXISTING BATCH	Opens existing memory batch and starts data logger
CLONE BATCH.	Creates a clone of an existing memory batch and starts data logger
REVIEW BATCH.	Opens an existing memory batch for viewing of readings
PLOT BATCH	Plots batch readings on the display
PLOT OPTIONS	Sets plot options. See 4.8 PLOT OPTIONS
EDIT BATCH TAGS . . .	Opens an existing memory batch for editing of tags
DELETE BATCH.	Deletes one memory batch
DELETE ALL BATCHES	Deletes all memory batches
FREE MEMORY	Displays amount of free memory (%)

> see “Batching/Data logging” on page 33

4.3 STATISTICS

ENLARGE STATS. Displays statistics in a larger font size

CLEAR STATS Resets to zero all statistical values

SELECT STATS Opens Select stats menu See 4.9 SELECT STATS

> see **“Statistics” on page 29**

4.4 PRINT/OUTPUT

SINGLE BATCH Prints or outputs to PC a single memory batch

ALL BATCHES Prints or outputs to PC all memory batches

CURRENT STATISTICS Prints or outputs to PC the current statistics

> see **“Transferring readings to a computer” on page 53**

4.5 SETUP

UNITS Opens Units menu See 4.10 UNITS

LIMITS. Opens Limits menu. See 4.11 LIMITS

CLOCK Opens Clock menu See 4.12 CLOCK

OUTPUT Opens Output menu See 4.13 OUTPUT

DISPLAY. Opens Display menu See 4.14 DISPLAY

BEEP VOLUME. Use Scroll keys to select beep volume 0 (off) to 5 (maximum), then press Enter

LANGUAGE Use Scroll keys to select menu language and then press enter

AUTO SWITCH OFF. Use Scroll keys to select auto switch off time, 5 to 10 mins/off, then press Enter

OPENING SCREEN Press Enter to toggle the opening screen on or off

LCD CONTRAST Use Scroll keys to select LCD contrast, 0 to 8 and then press Enter

4.6 ABOUT

GAUGE INFORMATION Press Enter to display technical information about the Half-Cell Meter

CONTACT Press Enter to display Elcometer offices worldwide and
(if programmed) Supplier contact details

HELP Press Enter to display an explanation of all the symbols used on the display

4.7 RESET

INTL GAUGE Press Enter to Reset Half-Cell Meter to International settings^d
(DD/MM/YYYY date format, metric units, etc.)

USA GAUGE Press Enter to Reset Half-Cell Meter to USA settings^e
(MM/DD/YYYY date format, imperial units, etc.)

Note: *The Half-Cell Meter will display a Yes/No confirmation screen before reset is activated.*

4.8 PLOT OPTIONS

GREYSCALE MIN/MAX Sets plot greyscale between the minimum and maximum readings in the batch

GREYSCALE LIMITS . . Sets plot greyscale between the minimum and maximum limits in the batch

THRESHOLD VIEW . . . Sets plot to white, or black below an adjustable threshold

SET THRESHOLD Press Enter, use Scroll keys to adjust value and then press Enter

> see “Plot options” on page 51

d. International settings can also be activated at switch on:

Press and hold third softkey    and switch on gauge.

e. USA settings can also be activated at switch on:

Press and hold fourth softkey    and switch on gauge.

4.9 SELECT STATS

NO. OF READINGS . . . Press Enter to toggle on or off
 MEAN Press Enter to toggle on or off
 STD DEVIATION. Press Enter to toggle on or off
 COEF OF VARIAT'N. Press Enter to toggle on or off
 LOWEST READING . . . Press Enter to toggle on or off
 HIGHEST READING. . . Press Enter to toggle on or off
 UNDER RANGE Press Enter to toggle on or off
 BELOW LIMIT Press Enter to toggle on or off
 ABOVE LIMIT Press Enter to toggle on or off
 OVER RANGE Press Enter to toggle on or off
 BLANK. Press Enter to toggle on or off

Note: Only two statistics from the above list can be toggled to 'on' at the same time.

4.10 UNITS

CELCIUS. Press Enter to toggle on or off
 FAHRENHEIT Press Enter to toggle on or off

4.11 LIMITS

LOW LIMIT Opens Low limit menu See 4.15 LOW LIMIT
 HIGH LIMIT Opens High limit menu See 4.16 HIGH LIMIT

4.12 CLOCK

TIME/DATE Use Scroll keys and Left/Right softkeys to set time and date, then press Enter

elcometer®

SET DATE FORMAT . . . Opens Set date format menu See 4.17 SET DATE FORMAT

4.13 OUTPUT

BAUD RATE Opens Baud rate menu See 4.18 BAUD RATE

RS232 BIT IMAGE Press Enter to toggle on or off

RS232 PLAIN TEXT . . . Press Enter to toggle on or off

Note: *RS232 Bit Image and RS232 Plain Text cannot be toggled to 'on' at the same time.*

> see “Transferring readings to a computer” on page 53

4.14 DISPLAY

SHOW TIME Press Enter to toggle on or off

STATS ON LCD Press Enter to toggle on or off

Note: *Time and Stats cannot both be toggled to 'on' at the same time.*

4.15 LOW LIMIT

LOW LIMIT ON Press Enter to toggle on or off

LOW LIMIT Use Scroll keys to adjust low limit and press Enter

> see “Setting limits” on page 27

4.16 HIGH LIMIT

HIGH LIMIT ON. Press Enter to toggle on or off

HIGH LIMIT Use Scroll keys to adjust high limit and press Enter

> see “Setting limits” on page 27

4.17 SET DATE FORMAT

DD/MM/YYYY Press Enter to toggle on or off

MM/DD/YYYY Press Enter to toggle on or off

4.18 BAUD RATE

1200 Select using Scroll keys and press Enter to select

2400 Select using Scroll keys and press Enter to select

4800 Select using Scroll keys and press Enter to select

9600 Select using Scroll keys and press Enter to select

14400 Select using Scroll keys and press Enter to select

19200 Select using Scroll keys and press Enter to select

5 MEASURING HALF-CELL POTENTIAL

5.1 BEFORE YOU START

- *Are you using the correct half-cell probe?*
See “Half-cell probes” on page 56.
- *Do you want statistics?*
See “Statistics” on page 29.
- *Do you want to save readings in memory?*
See “Batching/Data logging” on page 33.

5.2 PROCEDURE

1. Locate the position of a reinforcing bar (using a metal detector, covermeter or similar instrument).
2. Expose the bar, e.g. by drilling through the cover using a large drill.
3. Drill a small diameter hole into the bar suitable for attachment of the positive (red) cable using a screw or lead plug.
4. Mark out a grid on the concrete. Measurements will be taken at the intersection points of the grid. Typical grid spacing is 1 m x 1 m, however this may be reduced if localised corrosion is suspected. If the measured half-cell potential between two adjacent positions differs by more than 100 mV, it is recommended that the grid spacing is reduced.
5. If necessary, use tap water to wet the whole of the test area, or just the measurement positions.
6. Connect the red cable and extension reel between the exposed reinforcing bar and the red terminal on the Half-Cell Meter (Figure 4). Connect the black cable between the probe and the black terminal on the Half-Cell Meter.

7. Switch on the Half-Cell Meter.
8. Remove the end cap from the probe and store the cap safely.
9. Press the electrode against the concrete surface.
10. View the reading of half-cell potential on the display.
11. If you are satisfied with the reading, either move on to the next measurement location or press Enter [↵].

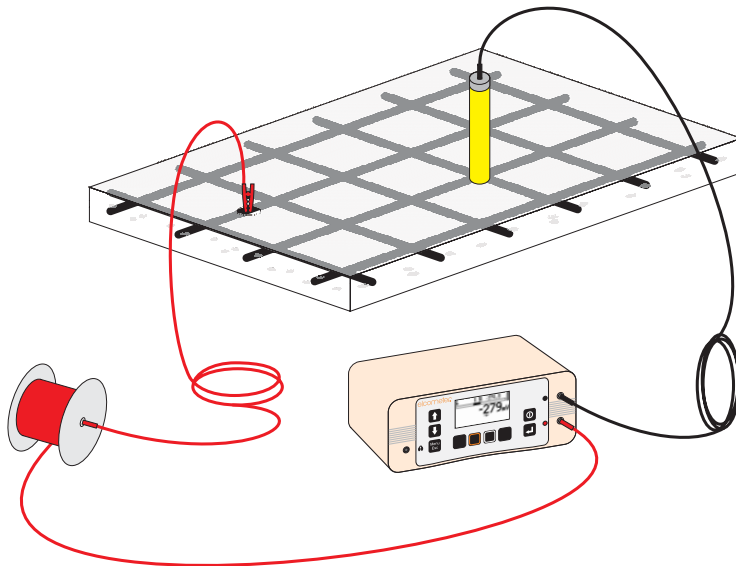



Figure 4. Typical instrument configuration for half-cell measurements

5.3 WHAT HAPPENS WHEN YOU PRESS ENTER [↵]

1. The half-cell potential reading is entered into the current statistical analysis.
2. If a batch is open, the reading is saved into a memory location.
3. The Half-Cell Meter will then advance (scroll) to the next memory location. When the last memory location of a row in a grid is reached, the Half-Cell Meter will advance to the first memory location of the next row (Figure 5). When the final memory location in a grid or linear batch is filled, the Half-Cell Meter closes the batch and exits batching.

Refer to “The BATCH softkey” on page 43 for information on how to navigate around a batch and review, delete, overwrite and skip memory locations while you are taking readings.

4. The Half-Cell Meter will beep:
 - Single beep - reading taken.
 - Double beep - reading taken in last memory location of a row in a grid.
 - Triple beep - reading taken in last memory location of the grid.
 - Triple beep (higher pitch) - reading taken is outside limits^f if limits have been set ( MENU / SETUP / LIMITS).

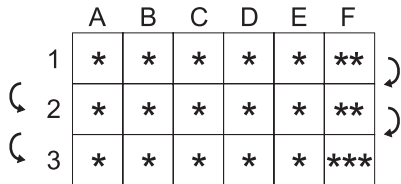


Figure 5. Beeps (*) and scrolling on a 6x3 grid batch

-
- f. Typically, a low limit will be applied at the threshold that would indicate corrosion e.g. -350 mV. Any readings lower (more negative) than this would then cause an alarm and be tagged as below limit in the statistics and/or the batch.

5.4 MEASURING CELL-TO-CELL RATHER THAN CELL-TO-BAR

In some instances it will not be possible to make a direct connection to a reinforcing bar. In this situation it is common practice to use two half-cell probes connected to the inputs of the Half-Cell Meter. One probe is fixed in position on the concrete surface and the other probe is moved over the surface. In this way the surface can be 'mapped'.

Using this method, the absolute value of the reinforcing bar to concrete half-cell will not be measurable, however changes from one point on the surface to the next can be measured and interpreted.

6 SETTING LIMITS

Low and High limits can be set by the user to monitor whether half-cell potential is within specifications.



MENU / SETUP / LIMITS

LOW LIMIT	
LOW LIMIT ON	<input type="checkbox"/>
LOW LIMIT	mV


HIGH LIMIT	
HIGH LIMIT ON	<input type="checkbox"/>
HIGH LIMIT	mV

Set the limit value and toggle the tick box to switch the limit on or off.


With limits switched on, when you take a reading which is within the limits, the Half-Cell Meter will beep once. When you take a reading which is outside the limits, the Half-Cell Meter will beep three times to warn you of an out-of-limit reading.

elcometer

When limits are switched on, any readings taken which are outside a limit are indicated on the reading screen by an arrow icon; \uparrow or \downarrow .

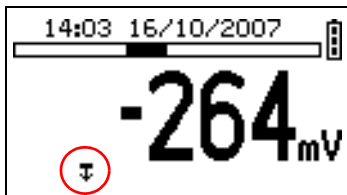

Reading is less than lower limit

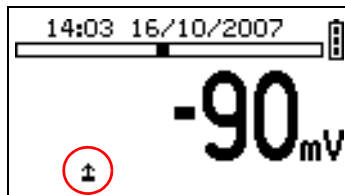

Reading is greater than upper limit

When batching is switched on and limits are switched on, readings in a batch which are outside the limits are marked as follows:

- Down arrow icon \downarrow if the reading is below the low limit.
- Up arrow icon \uparrow if the reading is above the high limit.

7 STATISTICS

Your Half-Cell Meter has a Statistics feature which calculates and displays a statistical analysis of readings as they are taken.

Statistics values are also calculated for the readings within a batch and these values are stored in the batch. To enter a reading into the statistical analysis while you are taking measurements, press [\uparrow].

Table 1: Calculated statistics values


n	Number of Readings	The running value for the number of readings taken in a group.
\bar{x}	Mean	The average of a group of readings; the sum of the individual readings divided by the number of readings.
σ	Standard Deviation	A statistical measure of the spread of values in a group of readings.
CV%	Coefficient of Variation	The standard deviation divided by the mean for a group of readings, expressed as a percentage.
\downarrow	Lowest Reading	The value of the lowest reading taken in a group.
\downarrow	Highest Reading	The value of the highest reading taken in a group.

Table 1: Calculated statistics values

«	Under range	The number and percentage of readings under range.
↴ or <	Low limit	The number and percentage of readings below the low limit.
±	Within limits	The number and percentage of readings within limits.
↱ or >	High limit	The number and percentage of readings above the high limit.
∞	Over range	The number and percentage of readings over range (or infinite).
□	Blank readings	Number and percentage of blank readings (skipped/not recorded/deleted).

Over range, under range and blank readings are not included in the calculation of mean, standard deviation, coefficient of variation, lowest reading and highest reading (neither are they counted in number of readings taken).

To access statistics, open the Statistics menu.

 MENU / STATISTICS

7.1 VIEWING STATISTICS

Statistics values can be viewed in a number of ways:

- As you are taking measurements, any two of the statistics values in Table 1 on page 29 can be displayed on the reading screen.

 MENU / SETUP / DISPLAY / STATS ON LCD

- At any point while taking measurements, any two or all of the statistics values can be displayed in enlarged format.

 MENU / STATISTICS / ENLARGE STATS

- When a batch has been created, statistics values for the batch can be displayed on the reading review screen.



 MENU / DATA LOGGER / REVIEW BATCH

7.2 ENLARGE STATS

Displays the chosen statistical values as double-height characters. Press ALL and use [\uparrow] and [\downarrow] to view all statistical values. Press [menu/esc] to return to the Reading Screen.

7.3 CLEAR STATS

Resets to zero all statistical values. Press YES to confirm or NO to cancel. Clear stats is not available while a batch is open⁹.

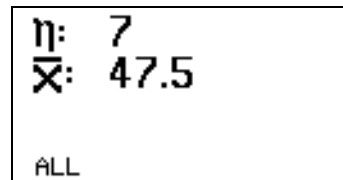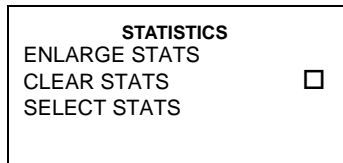

7.4 SELECT STATS

Allows the user to choose which statistics values are displayed on the reading screen during measurement.

Use [↑] and [↓] to move the cursor and press [↵] to select or deselect the statistics values.

Only two statistics values can be selected and displayed on the reading screen at the same time. To view all statistics values choose:

 MENU / STATISTICS / ENLARGE STATS / ALL

 MENU / SETUP / DISPLAY / SHOW TIME

SELECT STATS	
NO. OF READINGS	<input type="checkbox"/>
MEAN	<input type="checkbox"/>
STD DEVIATION	<input type="checkbox"/>
COEF OF VARIAT'N	<input type="checkbox"/>
LOWEST READING	<input type="checkbox"/>
HIGHEST READING	<input type="checkbox"/>
UNDER RANGE	<input type="checkbox"/>
BELOW LIMIT	<input type="checkbox"/>
ABOVE LIMIT	<input type="checkbox"/>
OVER RANGE	<input type="checkbox"/>
BLANK	<input type="checkbox"/>

g. Opening a new or existing batch will also cause all current statistical values to be reset to zero.

8 BATCHING/DATA LOGGING

Your Half-Cell Meter includes internal memory which can be used to save half-cell readings. Use this memory to save your readings as you take them; this will help to increase your productivity on site and reduce the need to rely on paper and pen to record your results.

All readings saved into the memory of your Half-Cell Meter are stored in 'batches'. Typically, a single batch is used to store readings from a particular area or location on a site.

There are two types of batch; 'linear' and 'grid'.

The User must define whether a batch is to be in linear (□□□□□) or grid (□□□) format when the batch is first opened (created).

8.1 LINEAR BATCHES

A linear batch of memory locations is similar to a single row or column of cells on a spreadsheet:

30	33	29	28	35	30	30	27	28	31	33
----	----	----	----	----	----	----	----	----	----	----

Maximum number of readings in a linear batch: 1000

Maximum number of linear batches: 200

8.2 GRID BATCHES

Grid batches are typically used when you are surveying large areas of concrete.

A grid batch of memory locations is similar to the grid of cells marked out by the rows and columns of a spreadsheet:

	A	B	C	D	E	F	G	H	I	J	K	L
1	30	33	30	27	28	31	33	35	32	30	30	
2	29	27	28	31	33	35	32	30	30	27	28	
3	30	27	28	31	33	35	32	28	30	27	28	
4	35	27	28	31	33	35	32	30	29	27	28	
5												

Maximum size of a grid batch:

255 rows x 255 columns

Maximum number of grid batches:

1000

Maximum total number of readings:

240 000

Memory locations in a grid batch are referred to by their column letter and row number, for instance A1, F4, etc.

Grid batches are typically used to save readings when surveying a large area of concrete:



 
 
 
 


- On the concrete, mark out a pre-defined grid of squares, typically of 0.5 m pitch. This is an arbitrary grid which does not necessarily align with the reinforcement bars.
- Use a Covermeter or similar instrument to locate and measure the minimum area of cover within each grid cell, or the cover to the reinforcement bar nearest to each grid-point, depending upon your survey procedures.













- Create a grid batch on your Half-Cell Meter and store half-cell potential measurements for each location.




 





8.3 WHAT DOES A BATCH CONTAIN?



Each batch stores three types of information:

- header fields(information entered by the user - see below)
- readings(entered automatically by the 331 as you are taking measurements)
- statistics(entered automatically by the 331 as you are taking measurements)

Symbol	Symbol meaning	Typical contents	Entered by	
			User	331
	Batch name	001-1 or Survey-01	✓	
	Batch format ( or )		✓	
nx	Number of columns (nx)	10 (only displayed for  batches)	✓	
ny	Number of rows (ny)	10 (only displayed for  batches)	✓	
n	Number of readings taken (n)	96		✓
	Site	Humber Bridge	✓	

Symbol	Symbol meaning	Typical contents	Entered by	
			User	331
	Location	North Pier	✓	
	Area	AA/123/4-001	✓	
	Grid spacing (size of each grid square)	500 mm	✓	
	Batch creation date/time	09:30 17/01/06		✓
	Batch update date/time	14:15 19/01/06		✓
	Low limit	20 mm	✓	
	High limit	35 mm	✓	
	Half-cell type	CU/CUSO4 AG/AGCL	✓	
	Temperature	20°C	✓	
	Engineer	M. Smith	✓	
	Customer	Highways Department	✓	
	Lowest reading			✓

Symbol	Symbol meaning	Typical contents	Entered by	
			User	331
	Highest reading			✓
	Mean			✓
	Standard deviation			✓
x (y%) < z mm	Number and percentage of readings below the lower limit, together with the limit value (if any).			✓
x (y%) 	Number and percentage of readings within limits.			✓
x (y%) > z mm	Number and percentage of readings above the upper limit, together with the limit value (if any).			✓
x (y%) 	Number and percentage of blank readings (if any).			✓
x (y%) <<	Number and percentage of under-range readings (if any).			✓
x (y%) 	Number and percentage of over-range (infinite) readings (if any).			✓
	Notes	Survey top only	✓	
The following additional symbols may be seen on the reading review screen:				
	The reading is under range (not measurable)			✓
	The reading is less than the low limit			✓


Symbol	Symbol meaning	Typical contents	Entered by	
			User	331
	The reading is greater than the high limit			✓
	The reading is over range (not measurable)			✓
-	Blank reading (memory location is empty)			✓

8.4 SAVING YOUR READINGS IN MEMORY

To use the memory you will need to understand how to use the Data Logger.

 MENU / DATA LOGGER

To use a batch of memory it is first necessary to open (create) a batch - see 8.6 below. Once the batch has been opened you can then save your readings into that batch as you take them.

To save a reading when a batch is open, press [].

You may exit batching at any time; once you exit batching (and hence the Half-Cell Meter is not data logging), readings will no longer be saved.

 MENU / DATA LOGGER / EXIT BATCHING

The following sections describe how to configure and use the Data Logger.

<p style="text-align: center;">DATA LOGGER</p> <p>EXIT BATCHING OPEN NEW BATCH OPEN EXISTING BATCH CLONE BATCH REVIEW BATCH PLOT BATCH PLOT OPTIONS EDIT BATCH TAGS DELETE BATCH DELETE ALL BATCHES FREE MEMORY</p>
--


8.5 EXIT BATCHING

Switches off batching (the data logger). No further readings are saved, the display reverts to the reading screen and the BATCH softkey disappears.

8.6 OPEN NEW BATCH


Opens (creates) a new memory batch.

The Half-Cell Meter uses the most recently created batch as a template for the new batch. The batch name is based upon the alphanumeric value of the last batch created, but all other header fields are left blank - see “What does a batch contain?” on page 35.

1. Enter information in the header fields (including the batch name) as required^h - see “How to enter information into batch header fields” on page 45.
2. When you are happy with the details you have added or changed, press  to create the batch. The display switches to the reading screen and then starts batching (the BATCH softkey appears on the reading screen).

8.7 OPEN EXISTING BATCH

Opens an existing memory batch.

1. Use Left/Right softkeys [→] to scroll to the required batch.

h. If a new batch is created with a name matching an existing batch, the instrument beeps and returns to the name editing screen.

2. Press [↵] to select the batch. When the batch has been opened, the display switches to the reading screen and then starts batching (the BATCH softkey appears on the reading screen). Readings in the existing batch can then be amended, deleted and added.

8.8 CLONE BATCH/COPY BATCH INFORMATION

Creates a clone (a copy) of an existing memory batch.

Cloning a batch allows the contents of an existing batch to be copied (everything is copied except for the readings). Cloning is typically used on site to create new batches without having to re-enter batch header details such as the name of the site, the engineer, the customer, etc.

When the new batch has been created by pressing [↵], the display switches to the reading screen and then starts batching (the BATCH softkey appears on the reading screen).


1. Use Left/Right softkeys [←→] to scroll to the batch you want to clone.
2. Press [↵] to select the batch.
3. Adjust information in the header fields as required (you must give the batch a name^h which does not already exist) - see “How to enter information into batch header fields” on page 45.
4. Press [↵] to create the clone.


8.9 REVIEW BATCH

Opens any existing memory batch for viewing of batch header information, readings and statistics. Also allows individual readings to be deleted.


1. Use Left/Right softkeys [←→] to scroll to the batch you want to review.
2. Press [↵] to select batch.

 
3. Review readings using the scroll keys to move around the contents of a batch.


Press and hold the Shift softkey [] and then press any of the Scroll keys to jump quickly to the start or end of line of readings.

Press [] to toggle between;

- REVIEW BATCH - shows header fields and statistics, and
- half-cell readings.

To delete a readingⁱ press the Delete softkey [].

4. Press [menu/esc] once to select another batch (using []), press [menu/esc] again to return to the Data Logger menu.

As you scroll between batches using the Left/Right softkeys [], the same page of information is shown for each batch. This feature makes it particularly easy to identify, for example, batches from a particular customer/location, or batches with readings outside limits.

A bracketed asterisk [*] next to the batch name indicates that this is the batch currently open (if any).

A complete list of the information given on a review batch screen is given in “What does a batch contain?” on page 35.

-
- i. When readings are removed (either over-written or deleted) from a very large batch, some statistics values may be replaced by a '-' until the batch is recalculated. To force a batch to be recalculated, exit batching (MENU / DATA LOGGER / EXIT BATCHING) and then re-open the batch (MENU / DATA LOGGER / OPEN EXISTING BATCH). Invalid statistics (PLEASE WAIT) will be shown on the display while the recalculation takes place.

8.10 PLOT BATCH

see “Plotting batches” on page 49

8.11 PLOT OPTIONS

see “Plotting batches” on page 49

8.12 EDIT BATCH TAGS

Same as ‘Review batch’ but allows editing of some of the batch contents.

A moveable cursor is shown next to any entries which can be modified. Pressing Enter opens that tag for editing.

8.13 DELETE BATCH

Deletes one memory batch.

1. Use Left/Right softkeys [\leftarrow →] to scroll to the batch you want to delete.
2. Press [✂] to delete batch.
The Half-Cell Meter displays a confirmation screen.
3. Press Yes to confirm deletion, No to cancel.

8.14 DELETE ALL BATCHES

Deletes all batches from the Half-Cell Meter and stops batching.

1. The Half-Cell Meter displays a confirmation screen.
2. Press Yes to confirm deletion, No to cancel.

8.15 FREE MEMORY

Displays the amount of free memory (%) and then returns to the reading screen after 2 seconds.


8.16 THE BATCH SOFTKEY

The BATCH softkey provides rapid access to the readings in a batch as you are taking them.

The BATCH softkey is only displayed on the reading screen when a batch is open.

Once the BATCH softkey has been pressed, you can then;

- scroll around the contents of a batch,
- review, delete and overwrite readings,
- skip memory locations,
- and then return to the reading screen ready to take more measurements in the same batch.

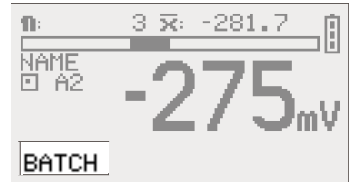

elcometer

Pressing BATCH displays the Reading Review Screen.

REVIEW readings using the scroll keys to move around the contents of a batch.

Press and hold the Shift softkey [⇧⇩] and then press any of the Scroll keys to jump quickly to the start or end of a line of readings.

When you have finished reviewing, press [↵] to return to the reading screen at the current memory location or press [menu/esc] to return to the reading screen at the original memory location.

DELETE readings by pressing the Delete softkey [⌫]. Press Yes to confirm deletion or No to cancel.

When you have finished deleting, press [↵] to return to the reading screen at the current memory location or press [menu/esc] to return to the reading screen at the original memory location.

You can **OVERWRITE** any of the readings.

1. Use the scroll keys to move to the reading you want to overwrite.
2. Press [↵].
The display switches to the reading screen.
3. Take a new measurement and press [↵] to enter reading.
4. Press Yes to confirm overwrite or No to cancel.

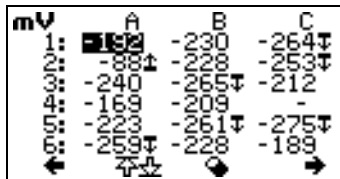


Figure 6. Reading review screen - grid batch

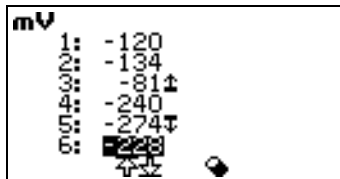



Figure 7. Reading review screen - linear batch

SKIP OVER memory locations in a grid batch using the scroll keys to move around the contents of the batch. This facility is useful when surveying in a grid around obstructions. The memory locations in the vicinity of the obstructions can be skipped over and left blank. When you are ready to return to the reading screen, press [].

8.17 HOW TO ENTER INFORMATION INTO BATCH HEADER FIELDS

You can enter information into the header fields when you first open (create) a new batch or clone a batch and when editing batch tags.

There are two methods of entering information into the header fields of a batch;

- use the keypad on the Half-Cell Meter, or
- use a computer and then transfer the information to the Half-Cell Meter using CoverMaster[®] software - see “CoverMaster software” on page 54.


Which method you use depends upon your circumstances. Typically, on a large measuring project, the best method is to design batches on your computer and then transfer the information to the Half-Cell Meter. The keypad can be used on site for minor changes and the addition of notes, etc. during cloning or editing of a batch.

ENTERING INFORMATION USING THE KEYPAD

Text and numbers can be entered into header fields using the Half-Cell Meter keypad. The function of the keys is shown below:

elcometer

1. Scrolls up through alphanumeric characters.
2. Scrolls down through alphanumeric characters.
3. Moves cursor left. Hold down to delete a character.
4. Select character set^j (abc, ABC, 123, #\$,!, etc.)
5. Moves cursor right. Hold down to insert a character.
6. Enters text into header field. Press Yes to confirm or No to continue editing.

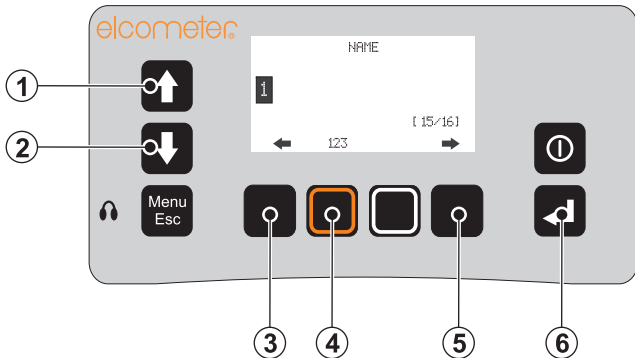

To delete an alphanumeric character, press and hold key 3.

To insert an alphanumeric character, press and hold key 5.

The screen displays the number of spare characters remaining in the field and the maximum total number of characters allowed.

-
- j. The following symbols are not permitted in the Batch Name field because they are illegal in Windows filenames: `V:*?\"<>|. They may be used in the other alphanumeric fields.`

The text fields can be entered/displayed using up to 256 different character codes. These include European accented characters and a few additional accented vowels used in the Chinese phonetic Pinyin system. When the Japanese language is selected, the European characters codes are substituted to represent the phonetic Katakana symbols which are shown at double-height.

9 A TYPICAL SURVEY (USING GRID BATCH MEMORY)


This section leads you step-by-step through taking measurements, saving half-cell readings in batches and producing a report.

1. Mark out your survey area (in this example a 14 x 14 grid).
2. Fit the half-cell probe and cables and then switch on the instrument.
3. Create a 14 x 14 grid batch.
4. Measure the half-cell potential over the entire survey area and record the measurements in the batch created in step 3 (press Enter [↵] to store a reading in the batch).
5. Connect your Half-Cell Meter to a PC and download the batch using CoverMaster software - see "Transferring readings to a computer" on page 53.

	A	B	C	D	E	F	G	H	I	J	K	L	M	N
1														
2														
3														
4														
5														
6														
7														
8														
9														
10														
11														
12														
13														
14														

elcometer

- You can now produce an easy-to-read report which shows half-cell potential over the survey area - see example below.

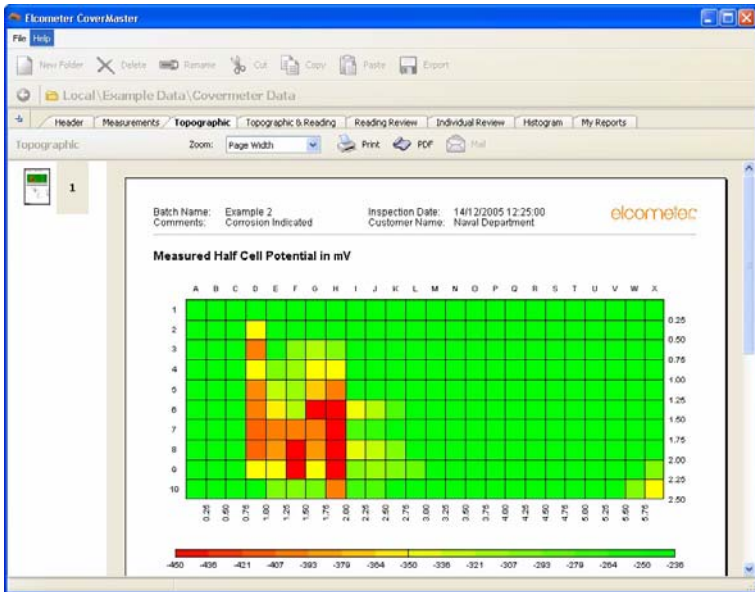

10 PLOTTING BATCHES

Your Half-Cell Meter can plot on its display a 'map' of the readings in a batch. Use this feature to locate potential trouble spots quickly and easily.

The map can be plotted in pseudo greyscale or in black and white:

Greyscale: The lowest (worst) readings are displayed as dark regions on the map; the highest readings as light regions. 16 levels of greyscale indicate readings between these extremes.

Black and white: A threshold value is set by the user. All readings below the threshold are displayed as black; all readings above the threshold are displayed as white.

In both instances, blank and over-range readings are shown as white and under-range readings are shown as black. To select greyscale or black and white, see "Plot options" on page 51.

10.1 PLOT BATCH

 MENU / DATA LOGGER / PLOT BATCH

1. Light area (✓)
2. Dark area (✱) - potential trouble spot
3. Cursor position
4. Cursor scroll^k left
5. Shift scroll^l
6. Zoom^m (0.5x, 1x, 2x, 4x)
7. Cursor scroll right
8. Zoom level
9. Upper limit
10. Lower limit/Threshold
11. Units
12. Voltage
13. Batch memory location

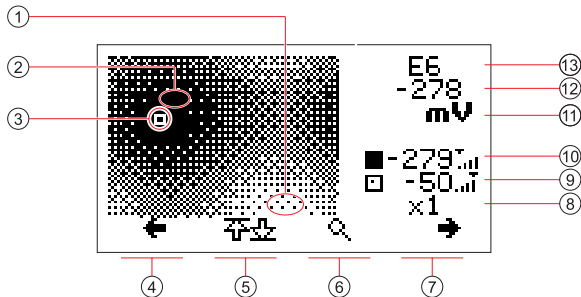



Figure 8. Typical greyscale plot

Use the arrows to scroll the cursor around the plot; as the cursor moves the current memory location and reading are shown at the top right of the display. Large batches will scroll when the cursor reaches the edge of the display.

-
- k. To scroll up or down, use the up [\uparrow] and down [\downarrow] keys.
 - l. Press with cursor scroll keys to jump to end or start of row/column
 - m. When a batch is first plotted, the initial zoom is set automatically to the highest level that allows the whole batch to be seen (or to x0.5 if the batch does not fit on the display at minimum zoom).

Use the Zoom softkey to zoom in to areas of interest.
Press [

10.2 PLOT OPTIONS

Use this menu to select how readings will be displayed on the plot.



MENU / DATA LOGGER / PLOT OPTIONS

GREYSCALE MIN/MAX

- Black is set to the minimum reading in the batch.
- White is set to the maximum reading in the batch.
- Readings between the minimum and maximum are indicated by decreasing levels of grey.

GREYSCALE LIMITS

- Black is set to the batch low limit.
- White is set to the batch high limit.
- Readings between the low and high limits are indicated by decreasing levels of grey.

(To set limits, see “Setting limits” on page 27.)

If limits have not been set, the minimum and maximum readings in the batch will be used and this option will show the same plot as ‘Greyscale min/max’.

THRESHOLD VIEW

A threshold value is set by the user. All readings below the threshold are displayed as black; all readings above the threshold are displayed as white.

PLOT OPTIONS	
GREYSCALE MIN/MAX	<input type="checkbox"/>
GREYSCALE LIMITS	<input type="checkbox"/>
THRESHOLD VIEW	<input type="checkbox"/>
SET THRESHOLD	

elcometer

SET THRESHOLD

Set threshold values for half-cell (in mV), as required.

The thresholds are applied to all batches and are independent of any other limits which may be set.

1. Light area (✓) - readings are above threshold value
2. Black area (✗) - readings are below threshold value

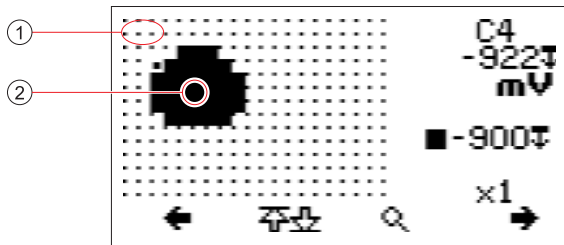


Figure 9. Typical threshold plot

11 TRANSFERRING READINGS TO A COMPUTER

Statistics and readings data can be transferred from the memory of your Half-Cell Meter to a computer. The data can then be used in reports, analysed to produce graphs, etc.

Connect your Half-Cell Meter to a computer, using the cable supplied - see “Connecting the data transfer cable” on page 56.

There are two methods of transferring statistics and readings:

- Print/output
- CoverMaster[®] software (to store, analyse and report)

11.1 PRINT/OUTPUT

Use the PRINT/OUTPUT function of the Half-Cell Meter to output data over the RS232 interface direct to a printer or to communications software such as Hyperterminal.

Choose between outputting a single batch, all batches or just the current statistics.



MENU / PRINT/OUTPUT / SINGLE BATCH



MENU / PRINT/OUTPUT / ALL BATCHES



MENU / PRINT/OUTPUT / CURRENT STATISTICS

Note: Before you use PRINT/OUTPUT, you must first select the correct output baud rate and output format.



MENU / SETUP / OUTPUT

Baud Rate. This can be set at values from 1200 to 19200. The default value is 9600 baud.

RS232 Bit Image. Toggle tick box to activate/deactivate. All images and characters are output as bit-maps. This allows printing on the Elcometer Miniprinter (see “Accessories” on page 61).


RS232 Plain Text. Toggle tick box to activate/deactivate. The Half-Cell Meter sends standard ASCII characters from the Courier New font setⁿ. This allows printing on RS232 printers and data transfer to a PC using software such as HyperTerminal.

11.2 COVERMASTER SOFTWARE

CoverMaster[®] software supplied on the CD enclosed with the gauge is designed specifically for your Half-Cell Meter. CoverMaster[®] is powerful but easy-to-use software which simplifies setting up and using your Half-Cell Meter:

- Design batch templates on your PC and download these to your Elcometer 331 Half-Cell Meter, ready for use on site.
- Download half-cell readings data from your Half-Cell Meter to the CoverMaster[®] data management system.
- Keep your survey notes, inspection reports, photographs and all your other inspection information in one place - CoverMaster[®].
- Create accurate and professional reports configured to allow your data to be understood easily at all levels.
- Create PDF versions of your reports and e-mail direct from CoverMaster[®].

For complete instructions on how to install and use CoverMaster[®] software, please refer to the instructions supplied with the software.

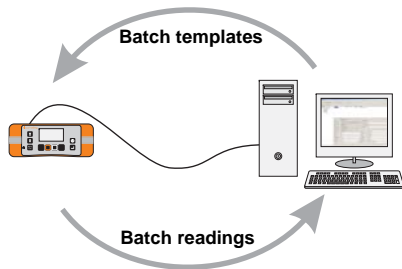

n. When RS232 Plain Text is selected the following languages will be output as English: Chinese, Japanese.

The image displays the CoverMaster Page Designer software interface. The main window shows a report template with a grid of data points and a table of properties. The software includes a menu bar (File, Edit, View, Format, Tools, Help), a toolbar with icons for Save, Delete, Cut, Copy, and Paste, and a zoom control. The main workspace contains a grid of data points and a table of properties. The right-hand side of the interface features a 'Name' list and a 'Property Editor'.

Three example report pages are shown, each with a title 'Measured Half Cell Potential in mV' and a color-coded grid. The reports include the following information:

- Batch Name:** Example 2
- Comments:** Corrosion Included
- Inspection Date:** 14/12/2005 12:00:00
- Customer Name:** Royal Department
- Site:** Southern
- Area:** Southern Shores
- Engineer:** J.C.
- Customer:** Naval Command
- Location:** G
- Cell Type:** G
- Temperature:** G

The reports also include a table of data points and a table of properties.

Table of Properties:

Item	Value	Unit
Area	1000	m ²
Perimeter	100	m
Volume	1000	m ³
Weight	10000	kg
Surface area	1000	m ²
Volume	1000	m ³
Weight	10000	kg
Area	1000	m ²
Perimeter	100	m
Volume	1000	m ³
Weight	10000	kg
Area	1000	m ²
Perimeter	100	m
Volume	1000	m ³
Weight	10000	kg

Use the CoverMaster® Page Designer...

...to create your own reports

11.3 CONNECTING THE DATA TRANSFER CABLE

1. Plug the 9-pin female D-type connector on one end of the data transfer cable into the COM port on the PC (an RS232 to USB transfer cable is available which allows you to connect your Half-Cell Meter to a USB port on your computer - see “Accessories” on page 68 for ordering details).
2. Plug the 5-pin connector on the other end of the data transfer cable into the RS232 connector at the rear of the Half-Cell Meter located under the access cover - see “Computer interface” on page 15.
3. Switch on the Half-Cell Meter and ensure that the Reading Screen is displayed.

12 HALF-CELL PROBES

Two types of half-cell probe are available for your Half-Cell Meter. The probes can be easily identified by colour:

- Copper-Copper Sulphate (Cu-CuSO₄): Yellow
- Silver-Silver Chloride (Ag-AgCl): Blue

12.1 WETTING YOUR PROBE

For your probe to function properly the ceramic sensing end (the electrode) must be wet. To get a good wet electrode, just place the electrode in tap water for two to three minutes; usually this will be sufficient to keep the sensor going all day. Keeping the plastic end cap on the sensor when it is not being used will also help to keep the electrode wet. During periods of extended storage, place a small amount of water in the end cap before pushing the cap onto the probe.

12.2 CARE OF YOUR PROBE AND CABLES

The probes do not require any maintenance; they do not need recharging and are sealed for life. Any mud or grit should be removed from the electrode by swirling the electrode back and forth in a container of warm, soapy water and then brushing with a wet rag. The soapy water will not harm or contaminate the electrode. Always check that the connecting cables are free of damage such as cuts and tears in the sheathing before use.

The Copper-Copper Sulphate half-cell probe is intentionally filled with a reserve of saturated Cupric Sulfate solution combined with solid Cupric Sulfate crystals to ensure a minimum 10-year design life.

Under certain circumstances a very small percentage of this reserve can leach out from the ceramic sensing tip of the half-cell producing crystals as shown in the photograph.

This does not affect the performance of the cell. The crystals should be removed by washing in distilled water.



12.3 TEMPERATURE

Do not allow the probe to freeze. Although freezing will not damage your probe, it will be impossible to obtain reliable measurements while in this state. All measurements are affected by temperature; if you take two readings in identical conditions, one in the summer at 29°C (85°F) and the other in the winter at 1°C (34°F), the half-cell potential readings will be different.

Each probe is tested at 25°C to be within ± 10 mV of a standard Calomel reference cell. The following values relative to a standard Calomel cell are used as the test limits during manufacture:

	Lower limit	Reference value for Calomel	Upper limit
Copper-Copper Sulphate (Cu-CuSO ₄)	+50 mV	+60 mV	+70 mV
Silver-Silver Chloride (Ag-AgCl)	-50 mV	-40 mV	-30 mV

12.4 SHELF LIFE

Your probe does not degrade when stored.

13 PERSONALISED WELCOME SCREEN

A personalised welcome screen can be designed on a computer and then downloaded into the Half-Cell Meter. Screen dimensions are 128 pixels x 64 pixels. The welcome screen is typically used to personalise the Half-Cell Meter with a logo, serial number, user name, etc. This is the first screen displayed when the Half-Cell Meter is switched on.

13.1 CREATING THE SCREEN

1. Download Elcometer 'Welcome Screen Wizard' software. This software is available free of charge from the downloads section of the Elcometer website, www.elcometer.com
2. Connect Half-Cell Meter to PC using Data Transfer Cable.
3. Switch on the Half-Cell Meter.
4. Ensure that the reading screen is displayed.
5. Run 'Welcome Screen Wizard' software and follow the on-screen instructions.

13.2 DELETING THE SCREEN

1. Run the 'Welcome Screen Wizard' software.

2. Click 'Next'.
3. Select 'Create a new screen setup'.
4. Click 'Next'.
5. Select 'Disabled'.
6. Click 'Next'.

Follow the remaining on-screen instructions to delete the welcome screen.

14 ERROR MESSAGES

Under certain conditions the Half-Cell Meter will display error messages. These messages are normally cleared by pressing any one of the softkeys. The cause of the error will be indicated by the message and should be corrected before proceeding. If any error persists, contact Elcometer or your Elcometer Supplier.

15 STORAGE



This Half-Cell Meter incorporates a Liquid Crystal Display (LCD). If the display is heated above 50°C (120°F) it may be damaged. This can happen if the Half-Cell Meter is left in a car parked in strong sunlight. Always store the Half-Cell Meter in its case when it is not being used.

16 MAINTENANCE

You own one of the finest Half-Cell Meters in the world. If looked after, it will last a lifetime.

Regular calibration checks over the life of the Half-Cell Meter are a requirement of quality management procedures, e.g. ISO 9000, and other similar standards. For checks and certification contact Elcometer or your Elcometer supplier.

The Half-Cell Meter does not contain any user-serviceable components. In the unlikely event of a fault, the Half-Cell Meter should be returned to your Elcometer supplier or directly to Elcometer. The warranty will be invalidated if the gauge has been opened.

Contact details can be found:

- Stored in the Half-Cell Meter (MENU / ABOUT / CONTACT).
- On the outside cover of these operating instructions.
- At www.elcometer.com

17 TECHNICAL DATA

Range:	-999 mV to +999 mV
Accuracy:	±5 mV
Half-cell probe stability:	10 mV with 3 µA load
Weight:	1.6 kg (3.5 lb)
Dimensions:	230 mm x 130 mm x 125 mm (9" x 5.1" x 4.9")
Operating temperature ⁰ :	0°C to 50°C (32°F to 120°F)

Case:	High impact ABS
Power supply:	Internal rechargeable Lithium Ion battery ^p .
Fuse rating of charger:	3 A
Battery life:	Up to 48 hours continuous use without backlight. Up to 20 hours with backlight.

18 ACCESSORIES

Your Half-Cell Meter is complete with all the items required to get started.

The following optional accessories are available from Elcometer, or your Elcometer supplier. To place an order please quote the sales part number which follows the description of each accessory.

Rechargeable battery pack:	TW33119038
Earphone:	TW99912220
Data transfer cable ^q (Half-Cell Meter to PC):	T99916217
RS232 to USB transfer cable:	T99916716
Half-Cell probe, Copper-Copper Sulphate (Cu-CuSO ₄):	TW33119668-1

-
- o. Operation outside these limits depends upon climatic conditions.
 - p. Battery packs must be disposed of carefully to avoid environmental contamination. Please consult your local environmental authority for information on disposal in your region. Do not dispose of the battery pack in a fire.
 - q. A 9-pin to 25-pin adapter may be required for certain PC RS232 ports.

elcometer®

Half-Cell probe, Silver-Silver Chloride (Ag-AgCl): TW33119668-2

Half-cell probe kit, Copper-Copper Sulphate (Cu-CuSO₄): TW331CUKIT
(probe, 2 x connecting cables, 1 x 25 m cable reel, carry case)

Half-cell probe kit, Silver-Silver Chloride (Ag-AgCl): TW331AGKIT
(probe, 2 x connecting cables, 1 x 25 m cable reel, carry case)

Half-cell probe cable reel, extendable to 100 m, with carry handle: TW33119683

Calibration Certificates traceable to National Standards including UKAS and NIST are available at the time of order, or alternatively, the gauge must be returned to Elcometer for certification. Calibration Certificates cannot be issued retrospectively.

19 RELATED EQUIPMENT

Elcometer produces a wide range of concrete and coatings inspection equipment. Users of the Elcometer 331 Half-Cell Meter may also benefit from the following Elcometer products:

- Elcometer 331 Concrete Covermeter
- Elcometer Adhesion and Bond Strength Testers
- Elcometer Concrete Crack Microscopes
- Elcometer Concrete Moisture Meters
- Elcometer Concrete Test Hammers

For further information contact Elcometer, your Elcometer supplier or visit www.elcometer.com

1 INDEX

A		
Accessories	61	
B		
Backlight	14	
BATCH	43	
Batch		
Cloning	40	
Copying	40	
Deleting all	42	
Deleting one	42	
Opening existing	39	
Opening new	39	
Recalculation	41	
Batches	33	
Grid	34	
Linear	33	
What they contain	35	
Batching	33	
Exiting	39	
Batteries		
Charging	7	
Life of	61	
Battery condition indicator	9	
Battery pack	6	
Baud rate	53	
Beeping	26	
C		
Calibration	60	
Calibration certificates	62	
Charger	7	
Charging the batteries	7	
Cloning a batch	40	
Computer		
Connection cable	61	
Computer, transferring data to	53	
Copying a batch	40	
CoverMaster software	54	
D		
Data logging	33	
Data transfer cable	56, 61	
Delete batch	42	
Deleting all batches	42	
Dimensions	60	
E		
Earphone	15	
Elcometer 331		
Features	3	
Overview	2	
Entering information	45	
Error messages	59	
Exit batching	39	
F		
Features	3	
Free memory	43	
G		
Grey Scale Levels	49	
Grid batches	34	
H		
Half-cell		
Taking a measurement	24	
Half-cell probes	56	
Care of	57	
Fitting to gauge	10	
Spares	62	
Storage and Shelf life	57	
Wetting	56	
Header fields		
Entering information	45	
I		
Interface	15	
Access cover	7	
RS232	15	

K

Keypad	11
--------	----

L

Language, selecting	14
LCD contrast	13
Limits	27
Batch icons	28
Linear batches	33
Liquid Crystal Display	59

M

Maintenance	60
Maximum/Minimum limits	27
Memory	
Capacity	33
Free	43
Memory location	
Advancing	26
Menu items	
ABOUT	20
ALL BATCHES	53
AUTO SWITCH OFF	12
BACKLIGHT	14
BATCH	43
BAUD RATE	23, 53
CLEAR STATS	31
CLOCK	21
CLONE BATCH	40
CONTACT	60
CURRENT STATISTICS	53
DATA LOGGER	18, 38
DELETE ALL BATCHES	42
DELETE BATCH	42

DISPLAY	22
ENLARGE STATS	31
EXIT BATCHING	38
FREE MEMORY	43
HELP	13
HIGH LIMIT	22
LCD CONTRAST	13
LIMITS	21, 27
LOW LIMIT	22
MENU	16
OPEN EXISTING BATCH	39
OPEN NEW BATCH	39
OUTPUT	22, 53
PLOT BATCH	50
PLOT OPTIONS	20, 51
PRINT/OUTPUT	19, 53
RESET	20
REVIEW BATCH	31, 40
RS232 BIT IMAGE	53
RS232 PLAIN TEXT	54
SELECT STATS	21, 32
SETUP	19
SHOW TIME	14, 32
SINGLE BATCH	53
STATISTICS	19, 31
STATS ON LCD	31
UNITS	21

Menus	16
-------	----

O

On/off	12
Open existing batch	39
Open new batch	39
Opening screen	58

P

PC	
Data transfer cable	61
Plotting batches	49
Greyscale	51
Threshold	51
Power on/off	12
Power supply	6

Q

Quick-start	6
-------------	---

R

Reports	54
---------	----

S

Saving your readings in memory	38
Screen	
Welcome information	13
Screen symbols	13
Battery condition	9
Software	
CoverMaster	54

Sound	26
Standards	4
Statistics	
Choice of	32
Clearing	31
Increasing size on display	31
Overview	29
Values calculated	29
Storage	59
Surveying large areas of concrete	34
Switching on/off	12

T

Time and date	14
Transferring data to computer	53, 54

W

Weight	60
Welcome screen	58

Z

Zoom	50
------	----